

# AKRIFORM

## Maintenance Instructions for Quickbox Bulk Merchandising Scoop Bin

### Recommended Cleaning Instructions:

- 1) Clean outside of the bins everyday with a damp warm cloth.
- 2) Clean/dust the fixture everyday.
- 3) Empty each sugar tray everyday.
- 4) Clean the scoops multiple times each day.
- 5) Ensure scoops remain in the scoop holder and not inside the bin.
- 6) Remove the candy and deep clean the inside and outside of the bins 1-2 per month.

Akriform recommends hand washing the bins in 40° C water and dishwasher soap suitable for hand washing. The Quickbox bin is dishwasher safe up to 90° C, but confirm that the detergent does not contain any aggressive chemicals before using dishwasher detergent. The sweetlock hinges MUST be removed before the bin is in contact with water (see “Removing Sweetlock Hinges” below). No solvents or sharp tools should be used for cleaning purposes.

### Recommended Stock Instructions:

- 1) Ensure fully stocked to maximize sales- Check stock levels multiple times a day
- 2) Label for each bin and fully stocked bags and/or cup
- 3) First-in-first-out product rotation to ensure freshness
- 4) Make sure the staff responsible for re-ordering know the range and don't miss ordering a product because it is already out of stock



**What you see, smell & hear directly affects what you will decide to buy.**  
60% of the perception of food quality is based on the environment.


---

## **Back Hook:**

- 1) **To assemble the back hook**, securely slide UP into the tracks on the back of the dispenser.



- 2) **To remove the back hook**, gently bend the large bottom piece outwards while pulling the back hook DOWN.

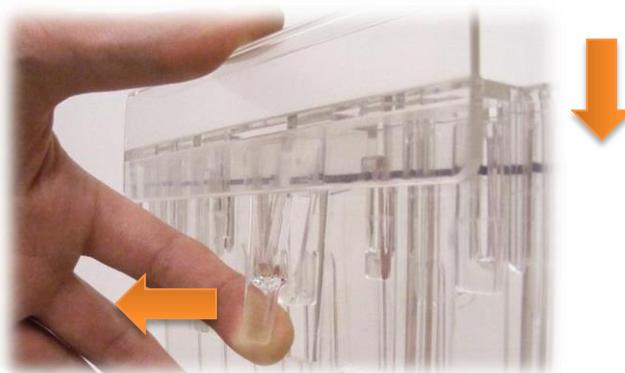

---


## **Top Lid:**

- 1) **To remove the top lid**, gently bend one side of the top of the bin outward and unhook the knob on that side of the lid. Repeat on the opposite side.
- 2) **To assemble to the top lid**, place one of the knobs in the hole and carefully bend the top of the bin outward so that the other knob can fit into the hole.



## **Remove Self Closing Lid:**

- 1) Open the slow self-closing lid.
- 2) Gently bend one side of the bin outward and unhook the sweetlock hinge from same side of the bin.  
The other side will come out easily.

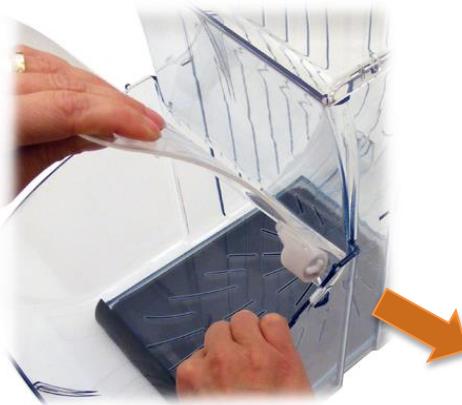


## **Remove Sweetlock Hinges:**

- 1) Once the lid is removed from the bin, pull the hinges outwards from the lid on each side. Please notice that each lid has a gray and white hinge.
- 2) Clean the hinges with a dry cloth. Do NOT place the hinges in water.
- 3) Clean the lid by hand with a damp cloth.



## **Assemble Sweetlock Hinges and Slow Self-Closing Lid:**


- 1) Please notice each sweetlock hinge is gray and white. It is not important which side of the bin each hinge is placed, however, it is important that each bin has a gray and white hinge.
- 2) Twist the hinge so that the longest tip of the three (see picture) matches the triangular hole on the bin.

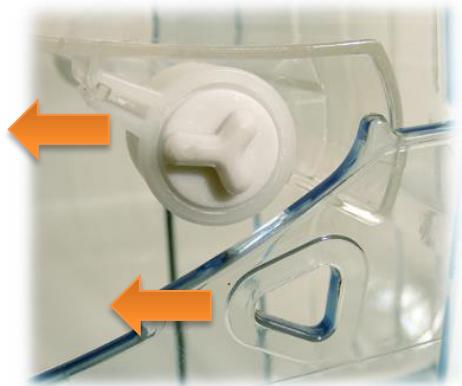

---

### Label Change:

- 1) Open the top lid of the bin.
- 2) Take off the slow self-closing lid (see Remove Self-Closing Lid instructions)
- 3) Place fingers in the designated inlets on either side of the false front label and carefully bend the sides outwards.
- 4) Pull the label holder towards you (see pictures below).
- 5) Place label in lip of the label holder to ensure label does not fall through.

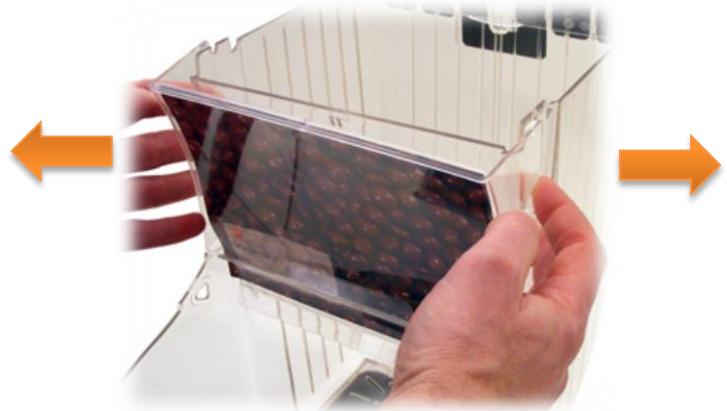

---

### Sugar Tray:

- 1) Pull the sugar tray straight towards you as shown in the image below.



---

## **Refill the Quickbox Bin:**

- 1) To refill the bin, carefully pull out the Quickbox bin from the fixture. Carefully pull the bin out until it hooks into the fixture.
- 2) Lift the top lid and secure it upwards.
- 3) Fill the bin.
- 4) Once the bin has been filled, gently close the lid and slide the bin back into the fixture.



---

**AKRIFORM**

---

Email: [bulk@akriform.se](mailto:bulk@akriform.se)  
Telephone: +46 (0) 8 625 99 00  
Website: [www.Akriform.com](http://www.Akriform.com)